

RE-POWERING GUIDELINES

If replacing a Briggs & Stratton engine with a Briggs & Stratton engine, provide the original engine's model and type numbers to assure the correct replacement. If replacing a competitor's engine with a Briggs & Stratton engine, let the horsepower and features of the original engine plus the expected work cycle be a guide in selecting the correct replacement. Also consider these factors:

1 Engine Selection

Match the engine's performance and cost to your specific application to get the optimum performance at an affordable price. That means better value for you.


- Vanguard™ OHV (overhead valve) engines are maximum performance, cast iron cylinder sleeve engines.
 select for continuous heavy duty applications.
- INTEK™ PRO, Industrial Plus™ and I/C® (Industrial/Commercial) engines are cast iron cylinder sleeve. select for medium duty commercial, industrial and rental use.
- INTEK™and PowerBuilt™ engines are aluminum cylinder bore OHV engines.
 - select for general consumer use.
- Standard engines are aluminum cylinder bore, side valve engines.
 - select for general consumer use.

2. Safety Points

For many safe hours of operation, it is important to maintain the original engine's same horsepower, starter type and position, fuel tank location, fuel line routing, muffler location, exhaust direction and muffler accessories (i.e., deflector, spark arrestor, etc.). Reinstall all guards, shields and safety devices. Replace missing, worn or damaged parts.


3. Horizontal Crankshaft Engines

- Compare overall engine size for possible mounting interference
- Match crankshaft's
 - Diameter "A"
 - Height "B" (distance from base to crankshaft center line)
 - Length "C" (distance from oil seal/cover's mounting face to end of crankshaft)
- Match crankshaft type, i.e., keyway, tapered or threaded
- Match crankcase cover's tapped holes for mounting accessories (if applicable)
- Match base mounting dimensions and bolt holes spacing

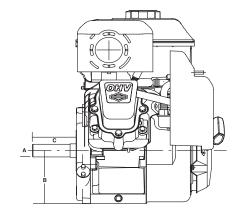

4. Vertical Crankshaft Engines

- Compare overall engine size for possible mounting interference
- Match starter type and starter grip position "A"
- Match crankshaft's
 - Diameter "B"
 - Keyway type "C"
 - Length "D" (distance from mounting face of sump not oil seal to end of crankshaft)
- Match mounting base dimensions and bolt holes spacing

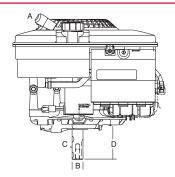



WARNING

Briggs & Stratton does not approve or authorize the use of these engines on 3-wheel All Terrain Vehicles (ATVs), motor bikes, fun/recreational go-karts, aircraft products or vehicles intended for use in competitive events. Use of these engines in such applications could result in property damage, serious injury (including paralysis), or even death.

SPECIFICATIONS OF SERVICE ENGINES

LEGEND OF ABBREVIATIONS

STARTER POSITION: Number shown is "o'clock" position of rewind starter.

Spark plug is considered to be the 12 o'clock position.

OIL FILLER & DRAIN: "CS" - carburetor side, "OC" - opposite carburetor, "D"

- dual (both sides).

GOVERNOR: "AV" - air vane, "M" - mechanical, "E" - electronic.

CONTROLS: "MF" - manual friction, "R" - remote, "AG" - adjustable for

a constant speed operation, "FC" - fixed speed control.

GROUND WIRE TERMINAL: May be used with stop switch in remote location.

ACCESSORY MTG. BOSS

or FLANGE MOUNTING: Tapped holes in crankcase cover used to fasten clutch

brackets, belt guards, etc.

DIMENSION: Distance from end of crankshaft to one of the points listed below:

(a) Oil seal on plain bearing horizontal crankshaft

engines.

(b) Mounting face of sump on vertical crankshaft

engines.

(c) Flange mounting face on horizontal crankshaft

engines.


SHIPPING WEIGHT: Gross Domestic Shipping Weight.

ALL POWER RATINGS SHOWN IN THIS CATALOG ARE SUBJECT TO THE FOLLOWING:

The power rating labels for individual engine models are initially developed by starting with SAE (Society of Automotive Engineers) code J1940 (Small Engine Power & Torque Rating Procedure) (Revision 2002-05). The above values may not necessarily represent the maximum gross power output of a Briggs & Stratton engine per SAE J1995 Engine Power Test Code -- Gross Power Rating. The maximum gross power output of these engines may be significantly higher in accordance with the SAE J1995 standard. Given both the wide array of products on which our engines are placed, and the variety of environmental issues applicable to operating the equipment it may be that the engine you have purchased will not develop the rated power when used in a piece of power equipment (actual "on-site" power). This difference is due to a variety of factors including, but not limited to, the following: differences in altitude, temperature, barometric pressure, humidity, fuel, engine lubrication, maximum governed engine speed, individual engine to engine variability, design of the particular piece of power equipment, the manner in which the engine is operated, engine run-in to reduce friction and clean out the combustion chambers, adjustments to the valves and carburetor, and other factors. The power ratings may also be adjusted based on comparisons to other similar engines utilized in similar applications, and will therefore not necessarily match the values derived using the foregoing codes.


13.5 HP - Series 21B900 INTEK™

Displacement 21.0 cu. in. (344.1 cc) Bore 3.44 in. (87.4 mm) Stroke 2.27 in. (57.7 mm) Oil Capacity 48 fl. oz. (1.4 l)

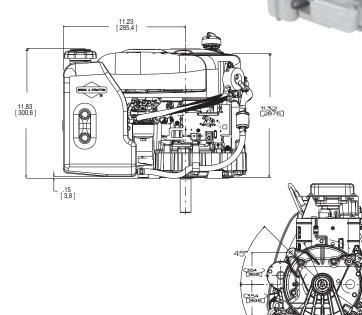

Features:

- Dura-Bore[™] cast iron cylinder sleeve for extended life
- Float carburetor for consistent easy starting
- Maintenance-free Magnetron® electronic ignition for quick, dependable starts
- Dual-Clean[™] air cleaner pleated paper filter with a foam pre-cleaner ensures maximum protection for extended engine life
- Overhead valve design (OHV) for cooler operation and longer valve life
- Patented linear balancing system provides smoother performance
- Buyer protection package provides twoyear consumer engine warranty

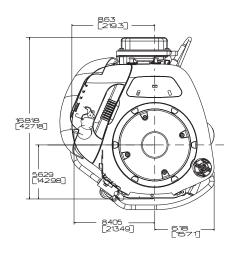

Model Type	Shipping Weight	Crankshaft	Crankshaft (P.T.O.) Extension	Dimension	Starter Position Bolt-On/Changeable	Ext. Oil Fill & Dipstick	Governor	Controls	Pulse Fuel Pump	Oil Pump with Filter	Choke-A-Matic®	Ground Wire Terminal	Fuel Tank (Quarts)	Top Governor Speed	Notes
21B902															
0015	76	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)	9	Χ	M	R	Х		Χ	Χ		3300	
0022	76	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)	9	Х	М	R	Х		Χ	Χ	3	3300	
21B972															
0016	77	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)	9	Х	М	R	Χ	Х	Χ	Χ		3300	
21B907															
0026	83	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)		Χ	М	R	Х		Χ	Χ		3300	▼
0028	84	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)	9	Х	М	R	Х		Χ	Χ	3	3300	•
0029	84	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)	9	Х	М	R	Х		Χ	Χ		3300	▼
21B977															
0036	84	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)		Х	М	R	Х	Х	Х	Х		3300	▼
0038	84	697390	Tapped 7/16-20, Keyway, 1" dia.	3-5/32(b)		Х	М	R	Х	Х	Х	Х	3	3300	▼

YOUR KEY TO THE WORLD'S FINEST ENGINES

This chart explains the unique Briggs & Stratton numerical model designation system. It is possible to determine most of the important mechanical features of the engine by merely knowing the model number. Here is how it works:

- A. The first one or two digits indicate the approximate CUBIC INCH DISPLACEMENT.
- B. The first digit after the displacement indicates the BASIC DESIGN SERIES, relating to cylinder construction, ignition, general configuration, etc.
- C. The second digit after the displacement indicates ORIENTATION OF CRANKSHAFT.
- D. The third digit after the displacement indicates TYPE OF BEARINGS, and whether or not the engine is equipped with REDUCTION GEAR or AUXILIARY DRIVE.
- E. The last digit indicates the TYPE OF STARTER.

BRIGGS & STRATTON MODEL NUMBERING SYSTEM

	FIRST DIGIT AFTER DISPLACEMENT	SECOND DIGIT AFTER DISPLACEMENT	THIRD DIGIT AFTER DISPLACEMENT	FOURTH DIGIT AFTER DISPLACEMENT
<u>A</u>	<u>B</u>	<u>c</u>	<u>D</u>	<u>E</u>
CUBIC INCH DISPLACEMENT	BASIC DESIGN SERIES	CRANKSHAFT ORIENTATION	PTO BEARING, REDUCTION GEAR, AUXILIARY DRIVE, LUBRICATION	TYPE OF STARTER
2 5 6 8 9 10 11 12 13 15 16 18 19 20 21 22 23 24 25 28 29 30 31 32 33 38 40 42 43 44 46 47 52 54 58	0 1 2 3 4 5 6 7 8 9 A to Z	0 to 4 - Horizontal Shaft 5 to 9 - Vertical Shaft A to G - Horizontal Shaft H to Z - Vertical Shaft	 0 - Plain Bearing/DU Non-Flange Mount 1 - Plain Bearing Flange Mounting 2 - Sleeve Bearing Flange Mounting Splash Lube 3 - Ball Bearing Flange Mounting Splash Lube 4 - Ball Bearing Flange Mounting Pressure Lubrication 5 - Plain Bearing Gear Reduction (6 to 1) CCW Rotation Flange Mounting 6 - Ball Bearing Gear Reduction (2 to 1) CCW Rotation 7 - Plain Bearing Pressure Lubrication 8 - Plain Bearing Pressure Lubrication 8 - Plain Bearing Auxiliary Drive (PTO) Perpendicular to Crankshaft 9 - Plain Bearing Auxiliary Drive Parallel to Crankshaft A - Plain Bearing Pressure Lubrication Without Oil Filter 	 0 - Without Starter 1 - Rope Starter 2 - Rewind Starter 3 - Electric Starter Only 110 or 230 Volt Gear Drive 4 - Electric Starter/110 or 230 Volt Gear Drive with Alternator 5 - Electric Starter Only 12 or 24 Volt Gear Drive 6 - Alternator Only 7 - Electric Starter 12 or 24 Volt Gear Drive with Alternator 8 - Vertical Pull Starter or Side Pull Starter 9 - Mechanical Starter A - Electric Starter 12 or 24 Volt Gear Drive with Alternator a - Electric Starter n - Electric Starter
61				
	entify Model 303447:	4	4	7
30	3	4 -	4	7
30 Cubic Inch	Design Series 3	Horizontal Shaft	Ball Bearing Flange Mounting Pressure Lubrication	Electric Starter 12 or 24 Volt Gear Drive with Alternator

TYPE 1234-01, The type number identifies the engines mechanical parts, color of paint, decals, governed speed, and Original Equipment Manufacturer.

CODE 01061201, The code is the manufacturing date and is read as follows:

YEAR	MONTH	DAY	ASSEMBLY LINE AND MANUFACTURING PLANT
01	06	12	01

Revised 2/06

BRIGGS & STRATTON ENGINE OWNER WARRANTY POLICY

Effective January 1, 2006 replaces all undated Warranties and all Warranties dated before January 1, 2006

LIMITED WARRANTY

Briggs & Stratton Corporation will repair or replace, free of charge, any part(s) of the engine that is defective in material or workmanship or both. Transportation charges on product submitted for repair or replacement under this warranty must be borne by purchaser. This warranty is effective for the time periods and subject to the conditions stated below. For warranty service, find the nearest Authorized Service Dealer in our dealer locator map at www.briggsandstratton.com, or by calling 1-800-233-3723, or as listed in the 'Yellow PagesTM'.

THERE IS NO OTHER EXPRESS WARRANTY. IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO ONE YEAR FROM PURCHASE, OR TO THE EXTENT PERMITTED BY LAW ANY AND ALL IMPLIED WARRANTIES ARE EXCLUDED. LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARE EXCLUDED TO THE EXTENT EXCLUSION IS PERMITTED BY LAW. Some states or countries do not allow limitations on how long an implied warranty lasts, and some states or countries do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation and exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state and country to country.

WARRANTY TERMS**							
Brand / Type	Consumer Use	Commercial Use	Condition of Warranty Term				
Classic™	1 year	90 days	2 years Consumer Use in European Union				
Etek™	1 year	1 year					
Extended Life Series™	2 years	1 year					
Fource [™]	2 years	90 days					
I/C®	2 years	1 year					
Industrial Plus™	2 years	1 year					
Intek™ (Kool Bore™)	2 years	90 days					
Intek™ (Sleeve Bore)	2 years	1 year					
Kerosene fuel operated engines	1 year	90 days					
Power Built™ OHV	2 years	90 days					
Q45 [™]	2 years	90 days					
Quantum®	2 years	90 days					
Quattro™	2 years	90 days					
Sprint™	2 years	90 days					
Vanguard™	2 years	2 years					
2-Cycle Snow engine	2 years	90 days					
Touch-N-Mow® Starter	5 years	90 days	Equipped on Quantum® or Intek™ engines				
	•	•	· · · · · · · · · · · · · · · · · · ·				

^{**}Engines used on Home Standby Generator applications are warranted under consumer use only. This warranty does not apply to engines on equipment used for prime power in place of a utility. **Engines used in competitive racing or on commercial or rental tracks are not warrantied.**

The warranty period begins on the date of purchase by the first retail consumer or commercial end user, and continues for the period of time stated in the table above. "Consumer use" means personal residential household use by a retail consumer. "Commercial use" means all other uses, including use for commercial, income producing or rental purposes. Once an engine has experienced commercial use, it shall thereafter be considered as a commercial use engine for purposes of this warranty.

NO WARRANTY REGISTRATION IS NECESSARY TO OBTAIN WARRANTY ON BRIGGS & STRATTON PRODUCTS. SAVE YOUR PROOF OF PURCHASE RECEIPT. IF YOU DO NOT PROVIDE PROOF OF THE INITIAL PURCHASE DATE AT THE TIME WARRANTY SERVICE IS REQUESTED, THE MANUFACTURING DATE OF THE PRODUCT WILL BE USED TO DETERMINE THE WARRANTY PERIOD.

ABOUT YOUR ENGINE WARRANTY

Briggs & Stratton welcomes warranty repair and apologizes to you for being inconvenienced. Any Authorized Service Dealer may perform warranty repairs. Most warranty repairs are handled routinely, but sometimes requests for warranty service may not be appropriate. For example, warranty would not apply if engine damage occurred because of misuse, lack of routine maintenance, shipping, handling, warehousing or improper installation. Similarly, warranty is void if the serial number of the engine has been removed or the engine has been altered or modified. If a customer differs with the decision of the Service Dealer, an investigation will be made to determine whether the warranty applies. Ask the Service Dealer to submit all supporting facts to his Distributor or the Factory for review. If the Distributor or the Factory decides that the claim is justified, the customer will be fully reimbursed for those items that are defective. To avoid misunderstanding which might occur between the customer and the Dealer, listed below are some of the causes of engine failure that the warranty does not cover.

Normal wear:

Engines, like all mechanical devices, need periodic parts service and replacement to perform well. Warranty will not cover repair when normal use has exhausted the life of a part or an engine.

Improper maintenance:

The life of an engine depends upon the conditions under which it operates, and the care it receives. Some applications, such as tillers, pumps and rotary mowers, are very often used in dusty or dirty conditions, which can cause what appears to be premature wear. Such wear, when caused by dirt, dust, spark plug cleaning grit, or other abrasive material that has entered the engine because of improper maintenance, is not covered by warranty.

This warranty covers engine related defective material and/or workmanship only, and not replacement or refund of the equipment to which the engine may be mounted. Nor does the warranty extend to repairs required because of:

- 1. PROBLEMS CAUSED BY PARTS THAT ARE NOT ORIGINAL BRIGGS & STRATTON PARTS.
- Equipment controls or installations that prevent starting, cause unsatisfactory engine performance, shorten engine life, or engines used for prime power. (Contact equipment manufacturer.)
- Leaking carburetors, clogged fuel pipes, sticking valves, or other damage, caused by using contaminated or stale fuel.
- 4. Parts which are scored or broken because an engine was operated with insufficient or contaminated lubricating oil, or an incorrect grade of lubricating oil (check oil level daily or after every 8 hours of operation. Refill when necessary and change at recommended intervals.) OIL GARD® may not shut down running engine. Engine damage may occur if oil level is not properly maintained.
- oil level is not properly maintained.

 5. Repair or adjustment of associated parts or assemblies such as clutches, transmissions, remote controls, etc., which are not manufactured by Briggs & Stratton.
- 6. Damage or wear to parts caused by dirt, which entered the engine because of improper air cleaner maintenance, re-assembly, or use of a non-original air cleaner element or cartridge. At recommended intervals, clean and/or replace the filter as stated in the Operator's Manual.

- 7. Parts damaged by over-speeding, or overheating caused by grass, debris, or dirt, which plugs or clogs the cooling fins, or flywheel area, or damage caused by operating the engine in a confined area without sufficient ventilation. Clean engine debris at recommended intervals as stated in the Operator's Manual.
- Engine or equipment parts broken by excessive vibration caused by a loose engine mounting, loose cutter blades, unbalanced blades or loose or unbalanced impellers, improper attachment of equipment to engine crankshaft, over-speeding or other abuse in operation.
- A bent or broken crankshaft, caused by striking a solid object with the cutter blade of a rotary lawn mower, or excessive v-belt tightness.
- Routine tune-up or adjustment of the engine.
- 11. Engine or engine component failure, i.e., combustion chamber, valves, valve seats, valve guides, or burned starter motor windings, caused by the use of alternate fuels such as, liquified petroleum, natural gas, altered gasolines, etc.

Warranty service is available only through service dealers which have been authorized by Briggs & Stratton Corporation. Locate your nearest Authorized Service Dealer in our dealer locator map at www.briggsandstratton.com or by calling 1-800-233-3723, or as listed in the 'Yellow Pages™'.

6.691.683	6.495.267	6.311.663	6.142.257	5.992.367	her Patents Pending) 5.765.713	5.546.901	5.235.943	5.086.890	4.819.593	D 476.629
6,647,942	6,494,175	6.284.123	6,135,426	5.904.124	5,732,555	5.445.014	5,234,038	5,070,829	4.720.638	D 457.891
6,622,683	6.472.790	6,263,852	6.116.212	5.894.715	5.645.025	5,503,125	5,228,487	5.058.544	4.719.682	D 368.187
6.615.787	6,460,502	6,260,529	6.105.548	5.887.678	5.642.701	5.501.203	5.197.426	5,040,644	4.633.556	D 375,963
6,617,725	6,456,515	6,242,828	6,347,614	5,852,951	5,628352	5,497,679	5,197,425	5,009,208	4,630,498	D 309,457
6,603,227	6,382,166	6,239,709	6,082,323	5,843,345	5,619,845	5,320,795	5,197,422	4,996,956	4,522,080	D 372,871
6,595,897	6,369,532	6,237,555	6,077,063	5,823,153	5,606,948	5,301,643	5,191,864	4,977,879	4,520,288	D 361,771
6,595,176	6,356,003	6,230,678	6,064,027	5,819,513	5,606,851	5,271,363	5,188,069	4,977,877	4,512,499	D 356,951
6,584,964	6,349,688	6,213,083	6,040,767	5,813,384	5,605,130	5,269,713	5,186,142	4,971,219	4,453,507	D 309,457
6,557,833	6,347,614	6,202,616	6,014,808	5,809,958	5,497,679	5,265,700	5,150,674	4,895,119	4,430,984	D 308,872
6.542.074	6.325.036	6.145.487	6.012.420	5,803,035	5.548.955	5.243.878	5.138.996	4,875,448		D 308.871